


ST160 Stainless Steel Foam Injector

Specification:
 Min - 8lpm, 80 bar
 Max - 80lpm, 350 bar
 Inlet - 3/8" F
 Outlet - 3/8" M

System Set-up:

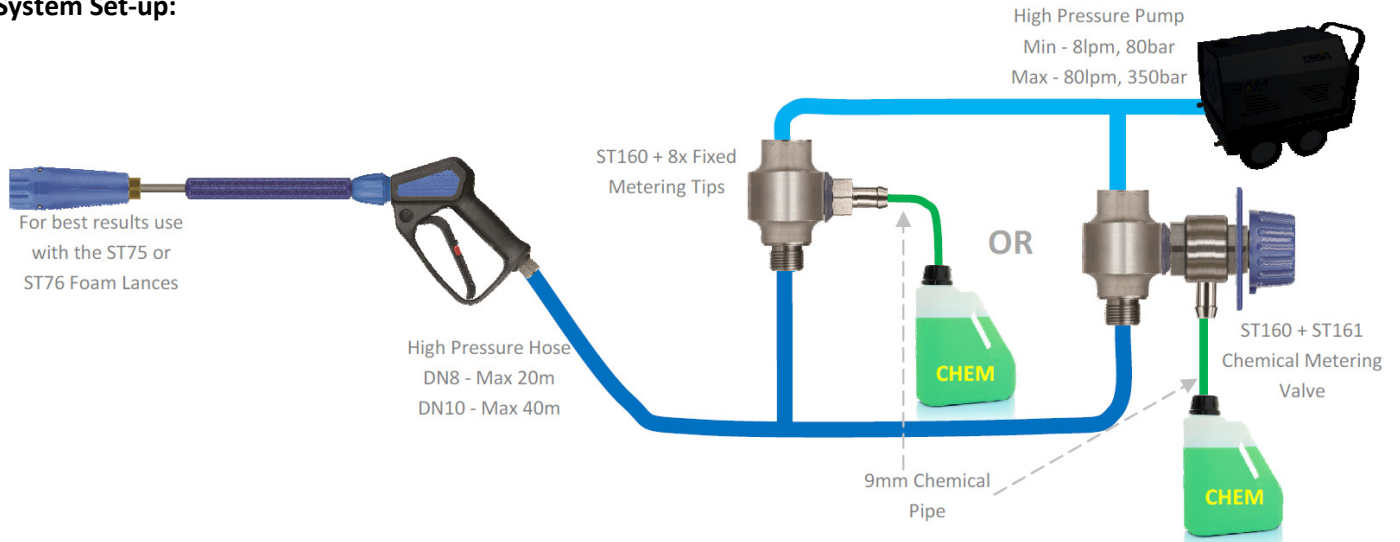

Foam Injector Set-up & Maintenance

Injector Nozzle

Use a 4mm Allen key, to screw in or out the injector nozzle. A small amount of grease on the threads will stop the nozzle becoming loose.

Counter Nozzle

Use a flat head screwdriver to screw in and out the counter nozzle. A small amount of grease on the threads will stop the nozzle becoming loose.



Metering Tips Installation & Dosing Chart



Dosing Nozzle Size	Dosing Percentage
0.5mm	0.5%
0.6mm	0.8%
0.7mm	1.0%
1.0mm	2.5%
1.1mm	3.0%
1.2mm	4.0%
1.3mm	5.0%
1.5mm	8.0%
1.7mm	10%
2.0mm	13.5%