


60.0000.00 Pulsar Rv- unload. 3/8F Bsp-18MPa
 60.0000.05 Pulsar Rv unload. 3/8F Npt -18MPa
 60.0000.60 Puls.RV unload. 3/8F Bsp-31MPa

60.0000.63 Pulsar Rv unload. 3/8F Bsp-stt.b/f.pin.31MPa
 60.0000.65 Pulsar RV unload. 3/8F Npt-31MPa

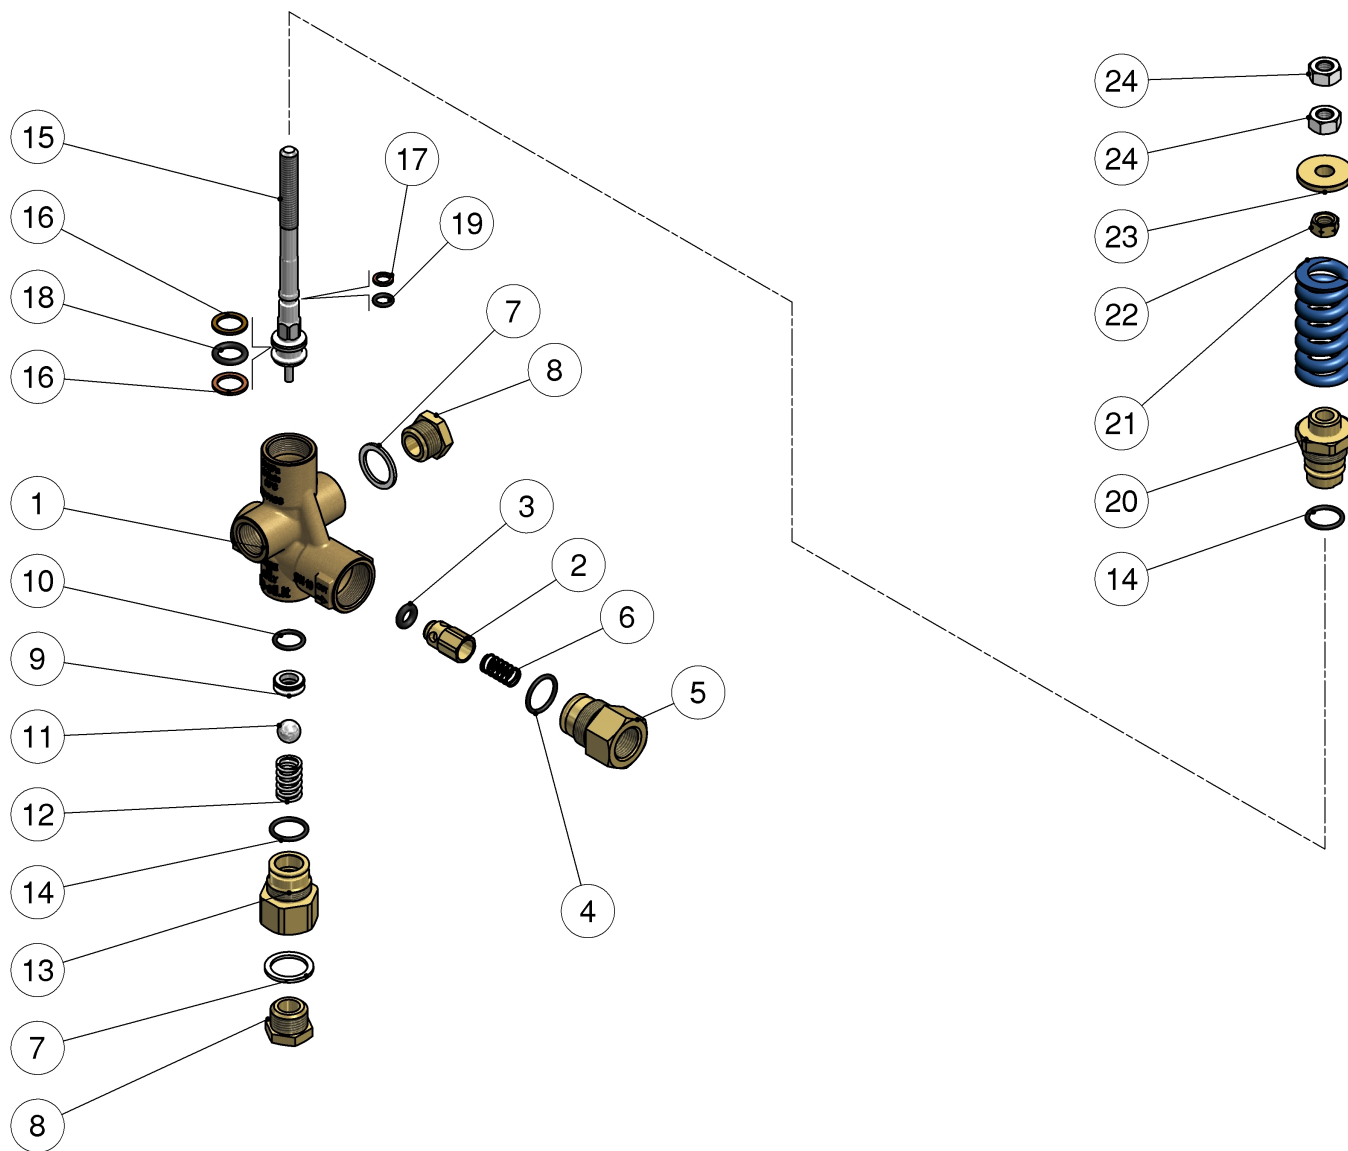

K1K2K3K4

	K1	K2	K3	K4
1 60.0141.35RHousing -Pulsar Rv 3/8 Bsp F brass	1			1
1 60.0136.35RHousing -Pulsar Rv 3/8 Npt F brass (1,2)	1			1
2 60.0052.99RShutter pin, brass+o-ring 3x6 mm	1			10
2 60.9052.93RShutter pin, Sst.+or 3x6 mm N90 (3)	1			10
3 10.3213.00RO-ring, 3x6 mm	1	•		10
3 10.3213.08RO-ring, 3x6 mm Ni 90 (3)	1			10
4 10.3066.01RO-ring, 1,78x15,6 mm Ni 85	1	•		10
5 60.1811.31RShutter coupl., 3/8F Bsp brass	1			5
5 60.1817.31R3/8Npt F nipple (1,2)	1			3
6 60.0053.51RSpring, 0,7x9x20 mm Sst.	1			10
7 14.4042.00RWasher, 16,7x22x1,5 mm alu.	2			25
8 60.0028.31RPlug,brass 3/8 Bsp,hex.19	2			25
8 60.0025.31RGrub screw, brass 3/8M Npt (1,2)	2			10
9 60.0259.20RSeat, 8mm + O-ring, 1,78mm	1	•		10
10 10.3059.01RO-ring, 1,78x11,11 mm Ni 85	1			10
11 14.7461.00RBall, 13/32" Sst.	1	•		10

K1K2K3K4

	K1	K2	K3	K4
12 60.0410.51RSpring, 1,6x11,5x20 mm Sst.	1			5
13 60.0142.31RSuction coupl., 3/8F Bsp brass	1			10
13 60.0137.31RSuction coupl., 3/8F Npt brass (1,2)	1			10
14 10.3064.01RO-ring, 1,78x14 mm Ni 85	2	•		10
15 60.0034.51RPuls.RV ex. piston, Sst.(2 bk)	1			5
16 10.4021.00RBack-up ring, opn. 11,5x15,9x1,2 mm	2	•		10
17 10.4006.01RBack-up ring, opn. 6,2x9x1,2 mm	1	•		10
18 10.3175.00RO-ring, 2,62x10,77 mm	1	•		10
19 10.3051.01RO-ring, 1,78x6,07 mm	1	•		10
20 60.0146.31RPiston holder, brass	1			5
21 60.0033.61RSpring, 5,7x26x53 mm blue	1			5
21 60.0012.61RSpring, 5x25x50 mm white (4,1)	1			5
22 11.4576.31RHex. nut, M8, brass	1			10
23 60.0011.31RSpring holder ring, brass	1			10
24 11.4574.00RHex. nut, M8	2			10

K1

K1 60.0009.24 Spares kit -Pulsar Rv, 9(11)x1pcs.	1
--	---

(1) 60.0000.05 (2) 60.0000.65 (3) 60.0000.63 (4) 60.0000.00